


M04

Q: マウントアングル、マウントレールの穴位置は？


A: 下図を参照ください。

<EIA> FS-E /FSR/FSL/FST

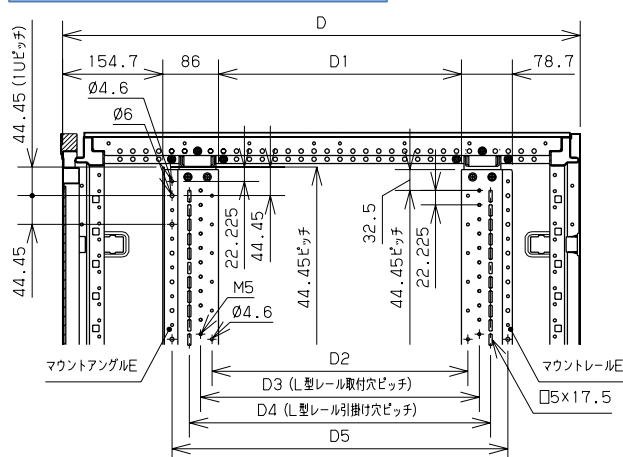


品名	D	D1	D2	D3	D4	D5
FS 60	600	175.6	195.6	230.6	265.6	319
FS 70	700	275.6	295.6	330.6	365.6	419
FS 80	800	375.6	395.6	430.6	465.6	519
FS 90	900	475.6	495.6	530.6	565.6	619
FS100	1,000	575.6	595.6	630.6	665.6	719
FS110	1,100	"	"	"	"	"

<JIS> FS-J

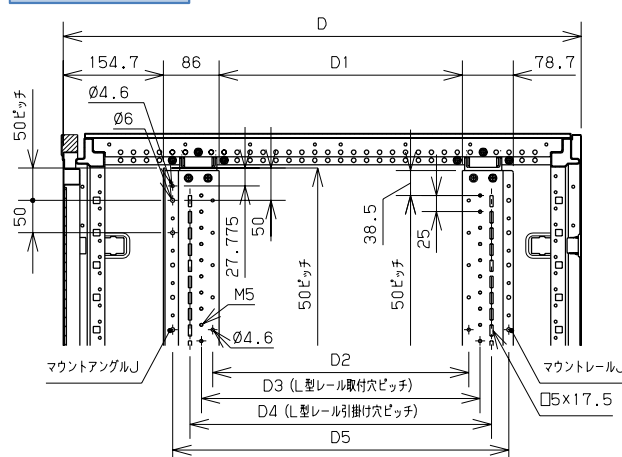

品名	D	D1	D2	D3	D4	D5
FS 60	600	175.6	195.6	230.6	265.6	319
FS 70	700	275.6	295.6	330.6	365.6	419
FS 80	800	375.6	395.6	430.6	465.6	519
FS 90	900	475.6	495.6	530.6	565.6	619
FS100	1,000	575.6	595.6	630.6	665.6	719
FS110	1,100	"	"	"	"	"

<EIA> FS-2ME /FSS/FSST/FSV/FSH-1H

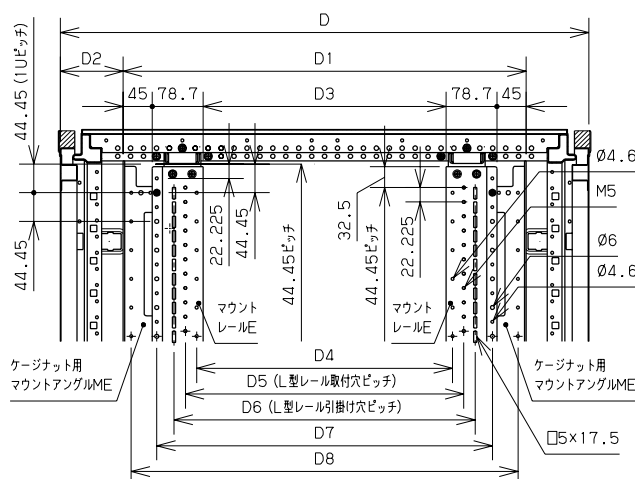

品名	D	D1	D2	D3	D4	D5	D6	D7	D8
FS 60	617	423	97	175.6	195.6	230.6	265.6	319	398
FS 70	717	523	〃	275.6	295.6	330.6	365.6	419	498
FS 80	817	623	〃	375.6	395.6	430.6	465.6	519	598
FS 90	917	723	〃	475.6	495.6	530.6	565.6	619	698
FS100	1,017	〃	137	〃	〃	〃	〃	〃	〃
FS110	1,117	〃	〃	〃	〃	〃	〃	〃	〃